



QUICK START GUIDE

1. Uncrate the console and inspect for any damages.
2. Console Installation,
 - a. A Philips screwdriver is required for the install.
 - b. Position the tablet stand with one of the two sets of pre-drilled holes.

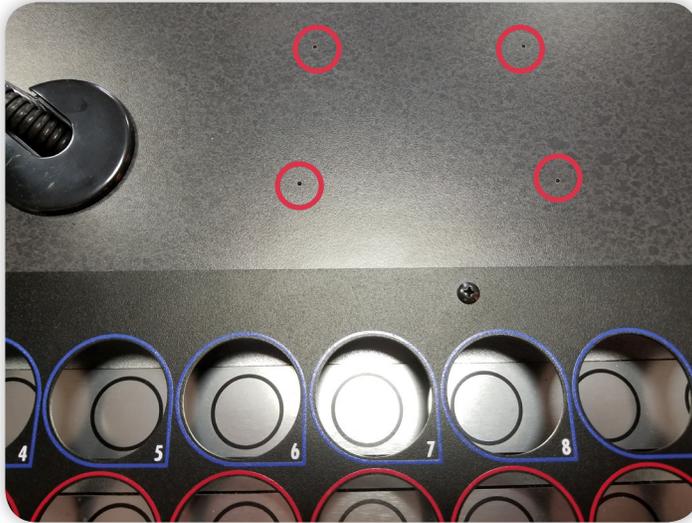

Center computer mounting holes.

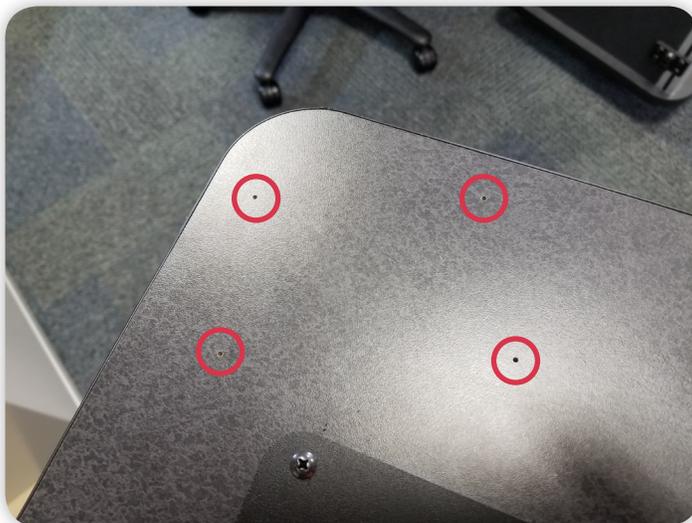

Left side computer mounting holes.

- c. The console supports mounting the computer in the center or on the left side of the top.
 - d. Use the 4 wood screws enclosed to fasten the stand to the desk.
 - e. Clamp the tablet into place and fasten cables.
3. Plug console into electrical outlet that has clean power.

CAUTION: A power source with abnormal voltage or excessive noise can result in improper console operation and possible damage not covered under warranty. (ensure electrical outlet is not on an air-conditioning, heater, fridge or range circuit)

QUICK START GUIDE



4. Turn on the main power switch on the console. The switch is located on the top left side of the unit. Hold the button for 2 seconds and wait for a while, tablets take a bit longer to boot up.


NOTE: This switch must be turned on first before the tablet is turned on.

5. Put all the bingo balls into the tray and rotate the tray handle clockwise to release the bingo balls into the blower chamber, then turn the handle back to close the chamber.



6. Push Blower Motor Switch to the Mix position.

QUICK START GUIDE

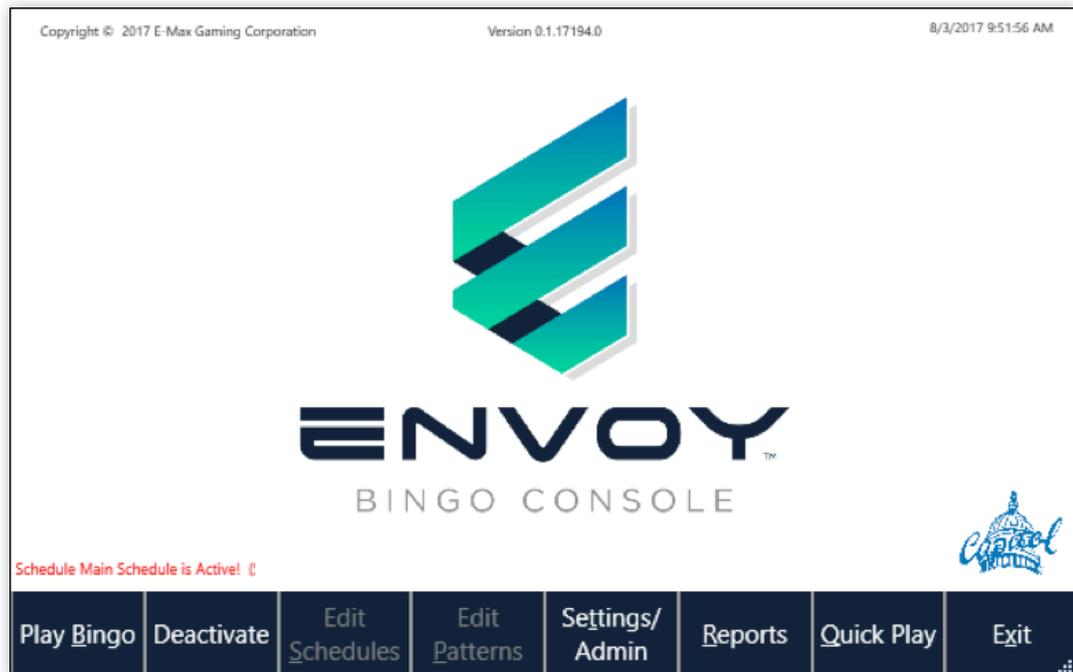

7. The Envoy has been set up with sample schedule so you can press **Play Bingo** and begin the session.

8. Now turn the Blower Motor to High to begin play.



9. **Deactivate** will end a currently active Schedule. If there is no current Schedule, it will be grayed out.

10. **Edit Schedules** allows for the creation or editing of schedules and games. It is grayed out if there is a currently active Schedule.

11. **Edit Patterns** likewise allows for the creation or editing of patterns. It is grayed out if there is a currently active Schedule.

12. **Settings\Admin** allows for the updating of a variety of settings and administrative functions.


13. **Reports** allows for the generation of reports.

14. **Quick Play** allows for quick Bingo game to be played outside of the regular active Schedule.

15. **Exit** will exit the system and prompt for a shutdown of the tablet.

For detailed programming help follow the demo session included within the console or refer to page 13 of the Operational Manual

QUICK START GUIDE

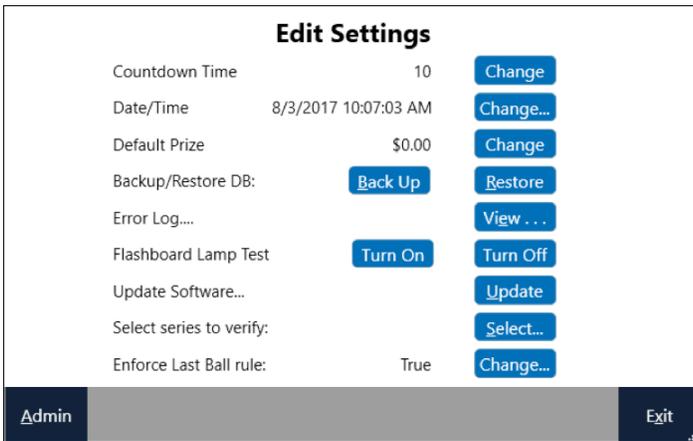

16. To change Settings go to the Main Menu screen and press **Setting/Admin**. Here you can set countdown time, date, time, prize default, backup/restore, error log, check flashboard, update software, selection of bingo paper series and last ball call choice.

17. Please backup your system regularly with the onscreen instructions.

WARNING: A proper shutdown of the gaming computer is required. Close your Schedule. Press EXIT. It will ask if you are sure you want to shut down, press YES.

Arrow Technical Assistance Center
Phone Support Hours: 8am to 12am
1-800-277-6214

